


NewFord NFM-01 Passive Multiple

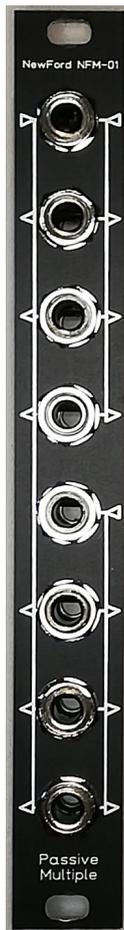

User Manual

NewFord NFM-01 Passive Multiple


Installation

The NFM-01 is passive and does not require connection to your rack's power supply.

The NFM-01 needs 3HP of free space in your case.

Two screws are needed to mount the module, it is recommended to use washers to avoid damaging the front panel at the mounting points.

How to use

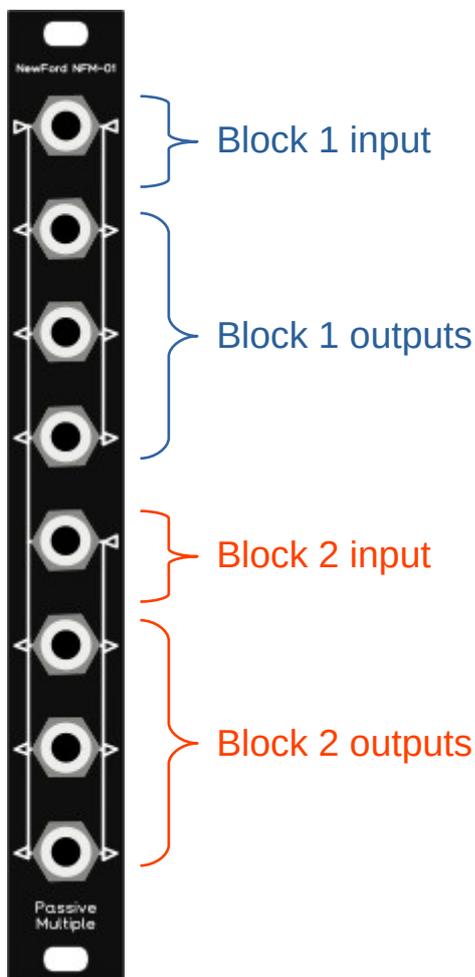

The NFM-01 is a multiple module consisting of two blocks, each with one input connected to three outputs.

If no jack is inserted into the input of the second block, its three outputs will copy the input of the first block.