


NewFord NFM-01 Passive Multiple

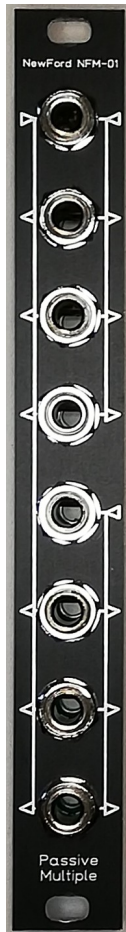

Build guide

NewFord NFM-01 Passive Multiple

Bill of Materials

Description	Quantity
Jack 3,5mm mono	8
Washer for jack	8
Nut pour jack	8
Printed circuit board (PCB)	1
Front panel	1

NewFord NFM-01 Passive Multiple

Tools needed

- Soldering iron
- Solder
- 8mm nut wrench (or pliers)

Build guide

The NFM-01 is the simplest DIY kit you can build :

- Insert the 8 jacks on the PCB and solder them.
- Pass the jacks through the holes on the front panel and insert the washers.
- Put on the nuts and tighten them.

The module is now operational, enjoy it !!