


# NewFord NFM-01 Passive Multiple

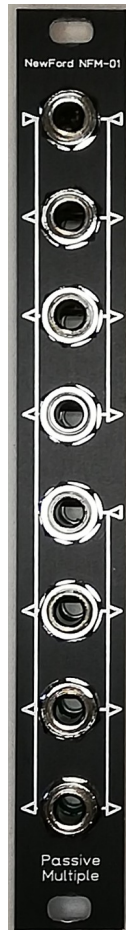

Assembly guide

# NewFord NFM-01 Passive Multiple

## Bill of Materials

| Description                 | Quantity |
|-----------------------------|----------|
| Jack 3,5mm mono             | 8        |
| Washer for jack             | 8        |
| Nut pour jack               | 8        |
| Printed circuit board (PCB) | 1        |
| Front panel                 | 1        |

## Tools needed

- Soldering iron
- Solder
- 8mm nut wrench (or pliers)

## Build guide

The NFM-01 is a very easy to build DIY kit :

- Insert the 8 jacks onto the PCB.
- Insert the frontplate onto the jacks, ensure everything is in place and solder the jacks.
- Insert the washers and nuts and tighten them.

The module is now ready, enjoy it !!